


Kit 3044


VOLKSWAGEN California (T5), 4-dr Bus, 03-09, 10-
VOLKSWAGEN Caravelle (T5), 4-dr Bus, 03-09, 10-
VOLKSWAGEN Multivan (T5), 4-dr Bus, 03-09, 10-
VOLKSWAGEN Shuttle (T5), 4-dr Bus, 03-09, 10-
VOLKSWAGEN Transporter (T5), 4-dr Van, 03-09, 10-

This Kit is only for vehicles with fixpoint mounting or T-profile.

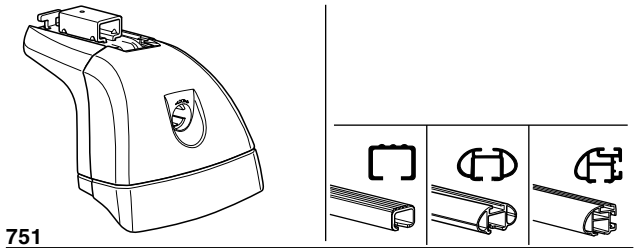


THULE[®]
SWEDEN


ISO 11154-E

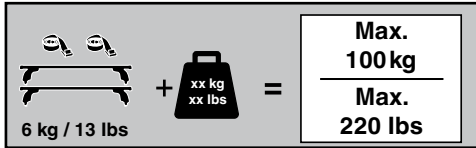






6 kg / 13 lbs + xx kg xx lbs = **Max. 100 kg**
Max. 220 lbs

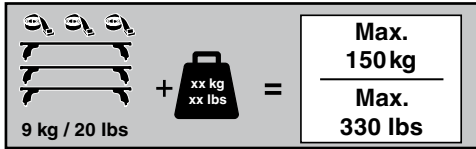




9 kg / 20 lbs + xx kg xx lbs = **Max. 150 kg**
Max. 330 lbs

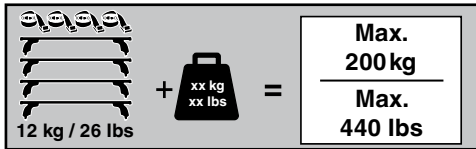


12 kg / 26 lbs + xx kg xx lbs = **Max. 200 kg**
Max. 440 lbs

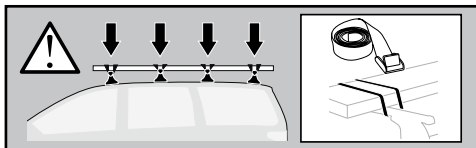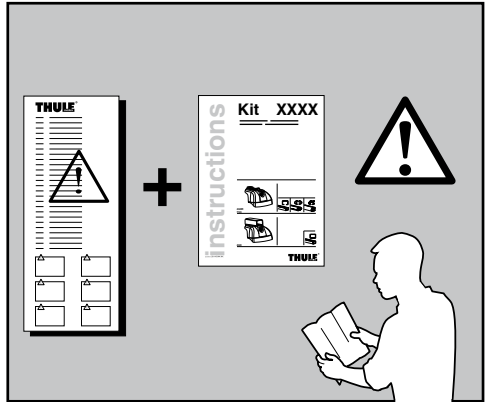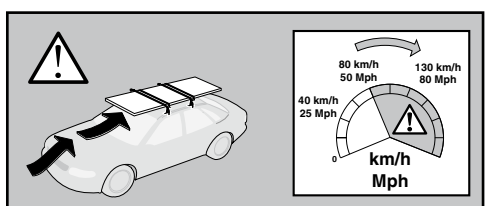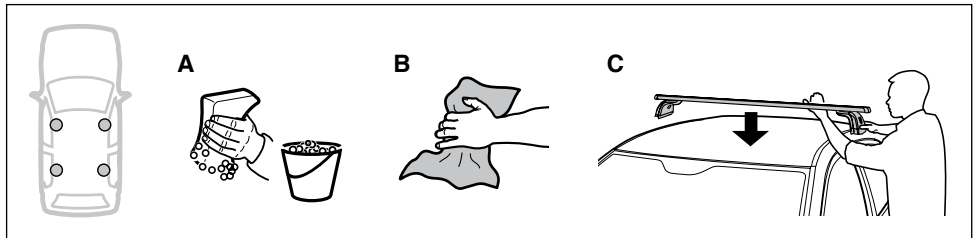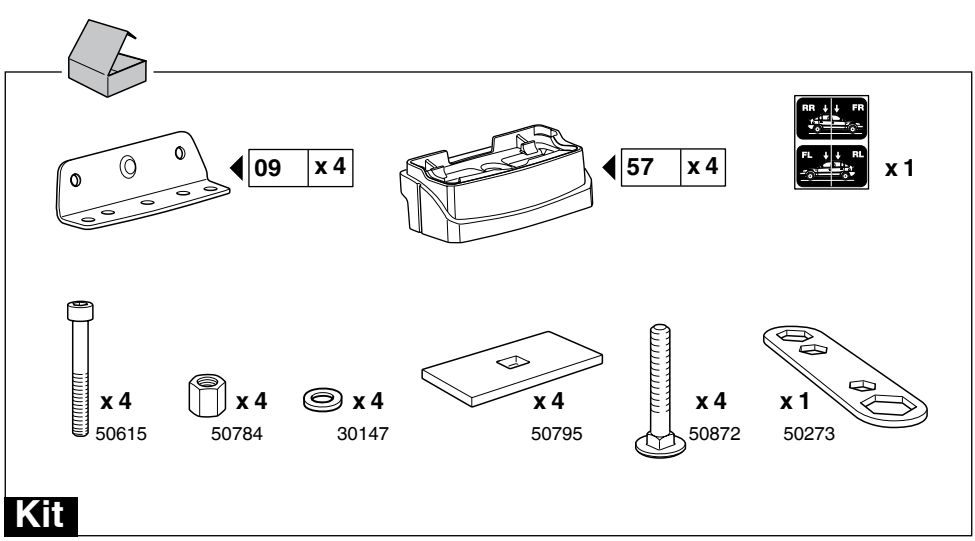
Kit

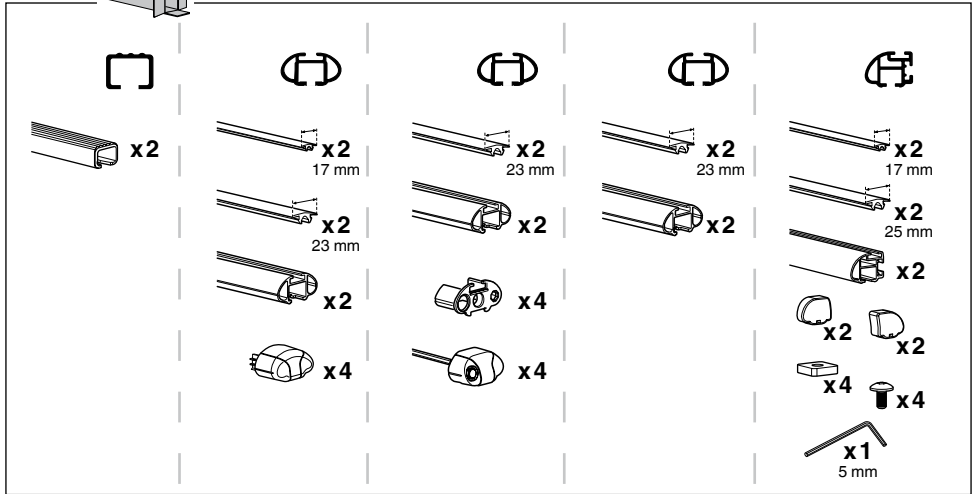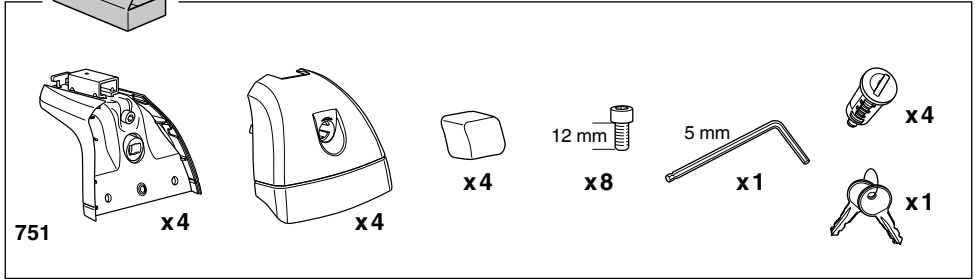



1

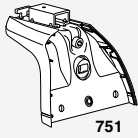



751

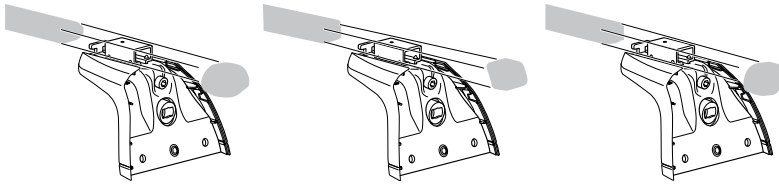

x4

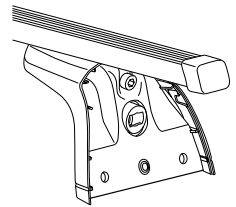
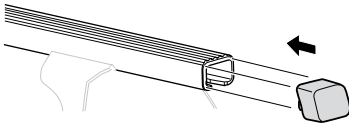


x4

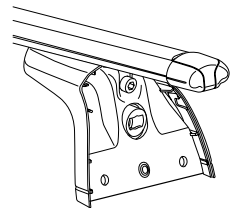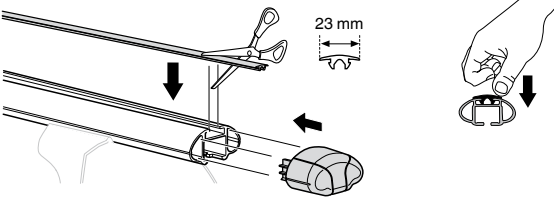

x4

x4

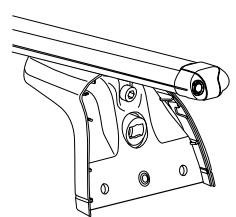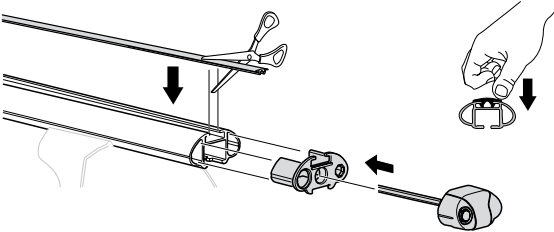

x2



x2

x4









x4

x1

5 mm

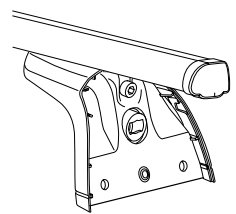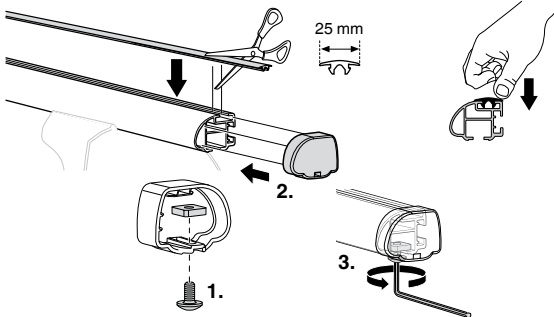

2

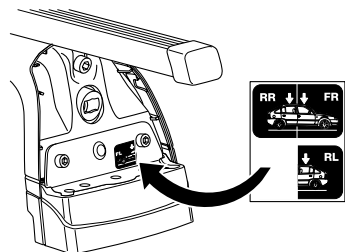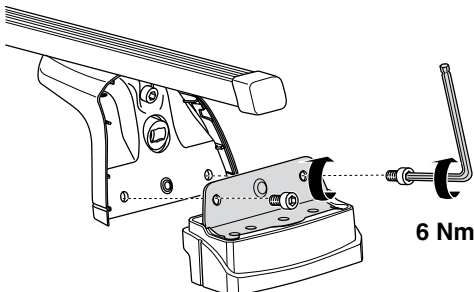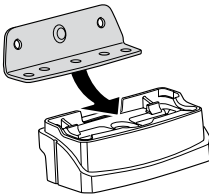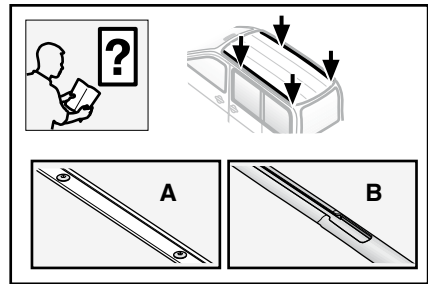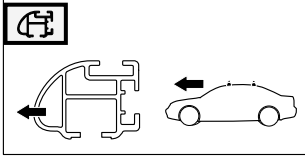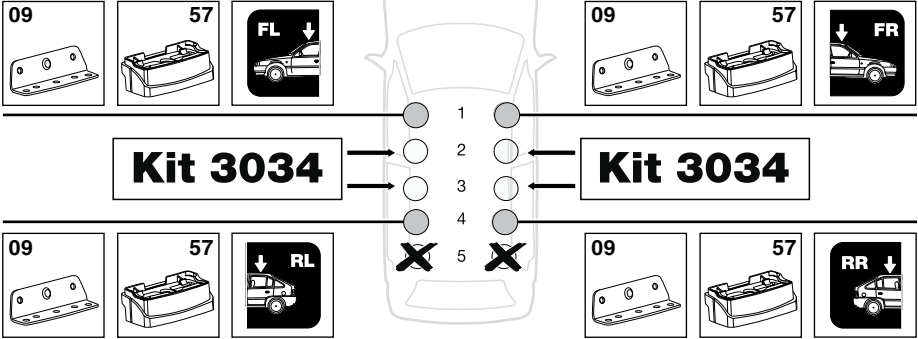


3





x4





x4




x1

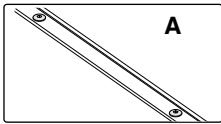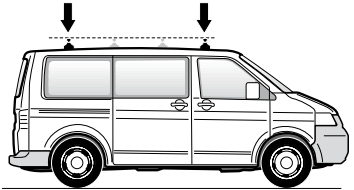


A

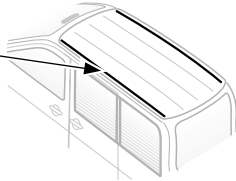


A

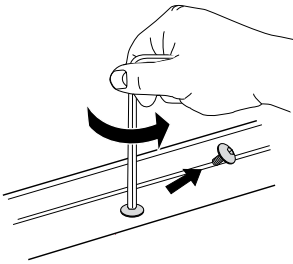

B

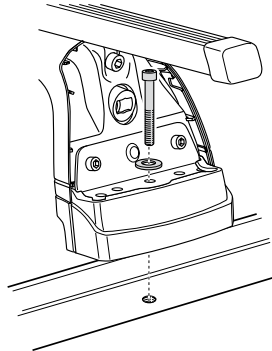


C

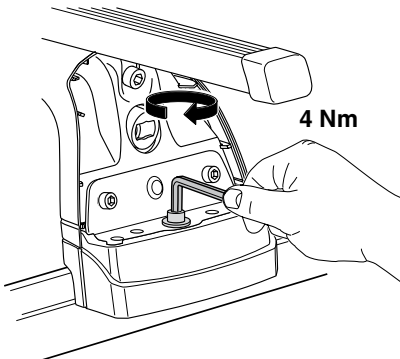





4 Nm

D

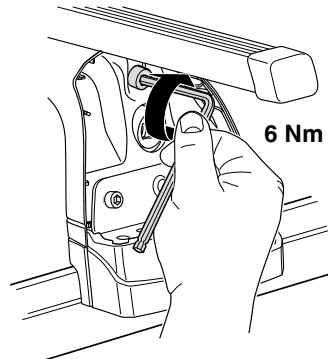


6 Nm


3

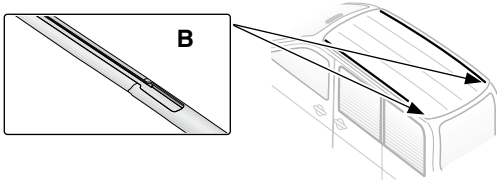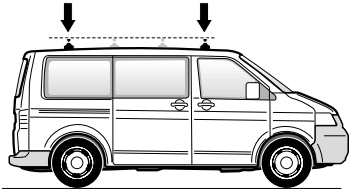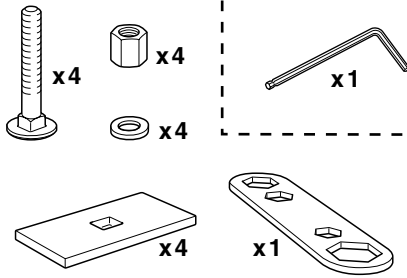


A

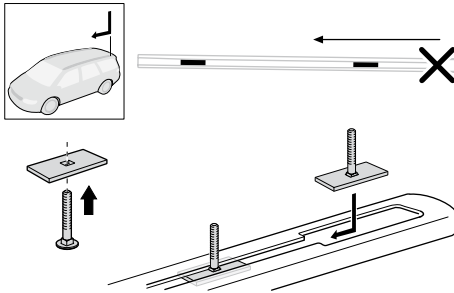


B

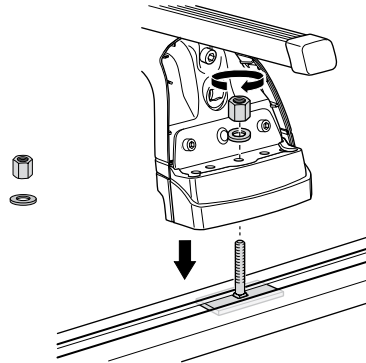


C

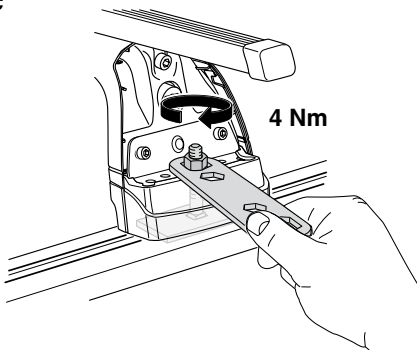

D



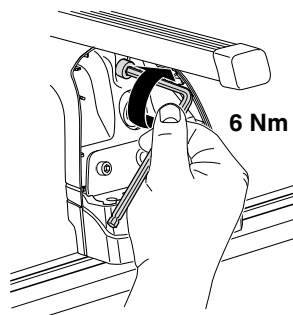


4

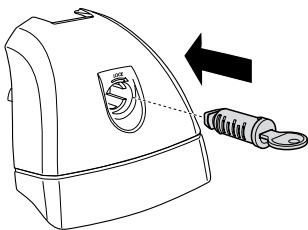




5





5 mm

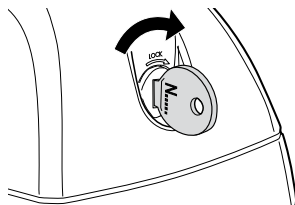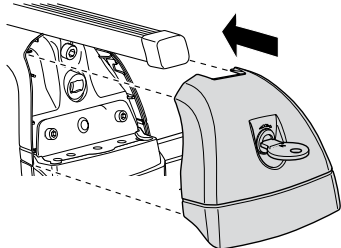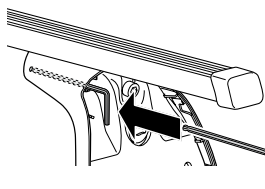

6

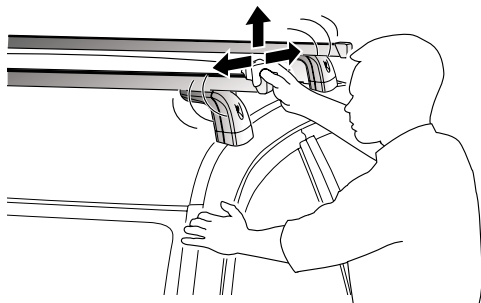

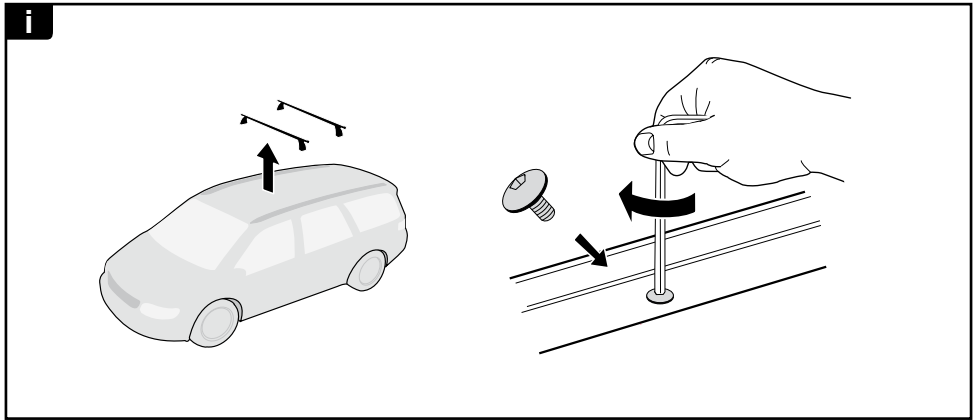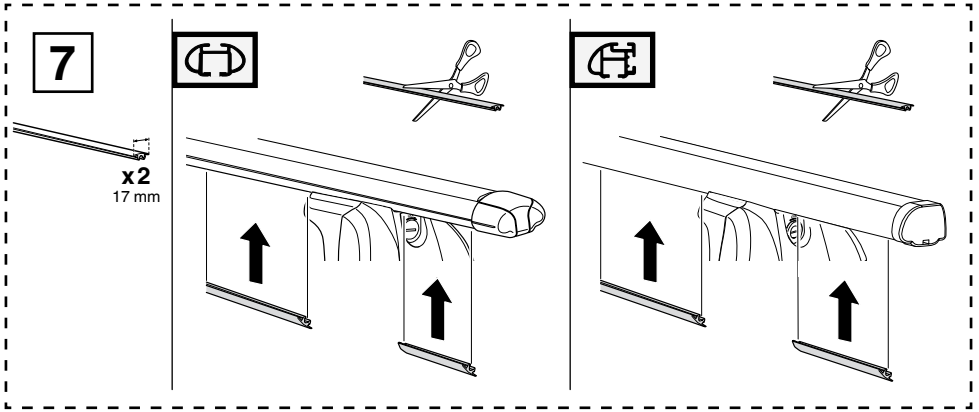

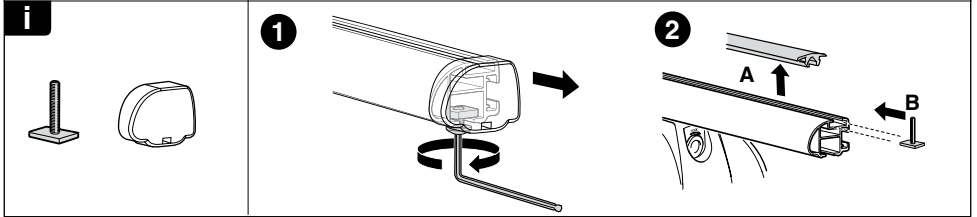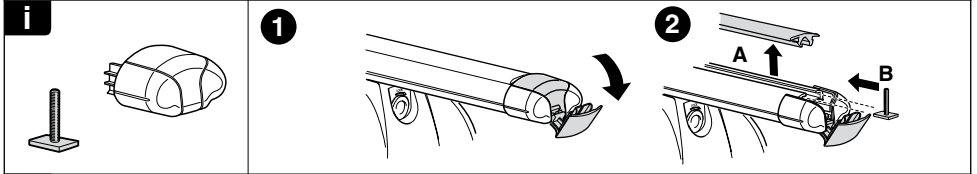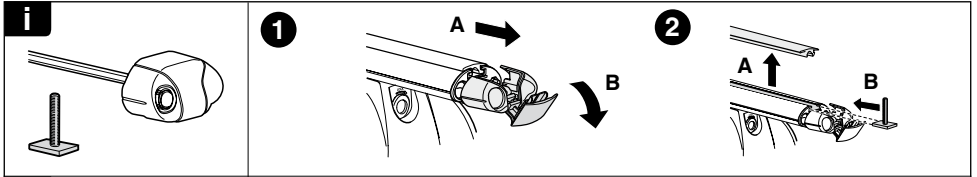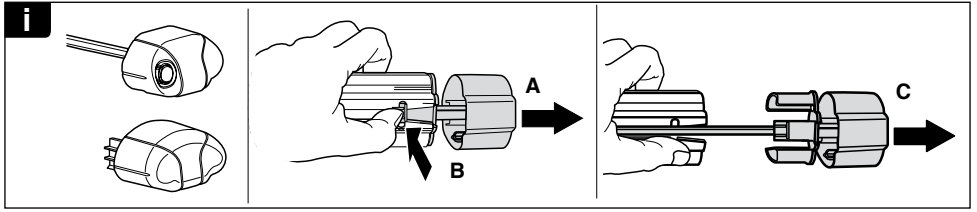

THULE
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA